


M. S. Foster & Associates

1866 N. Country Lane, Michigan City, IN 46360
Phone 219-879-9225 • Toll Free 888-452-4053
Fax 219-879-9313 • email: sales@msfoster.com
www.msfoster.com

Recommended Drilling for CamWash Pump

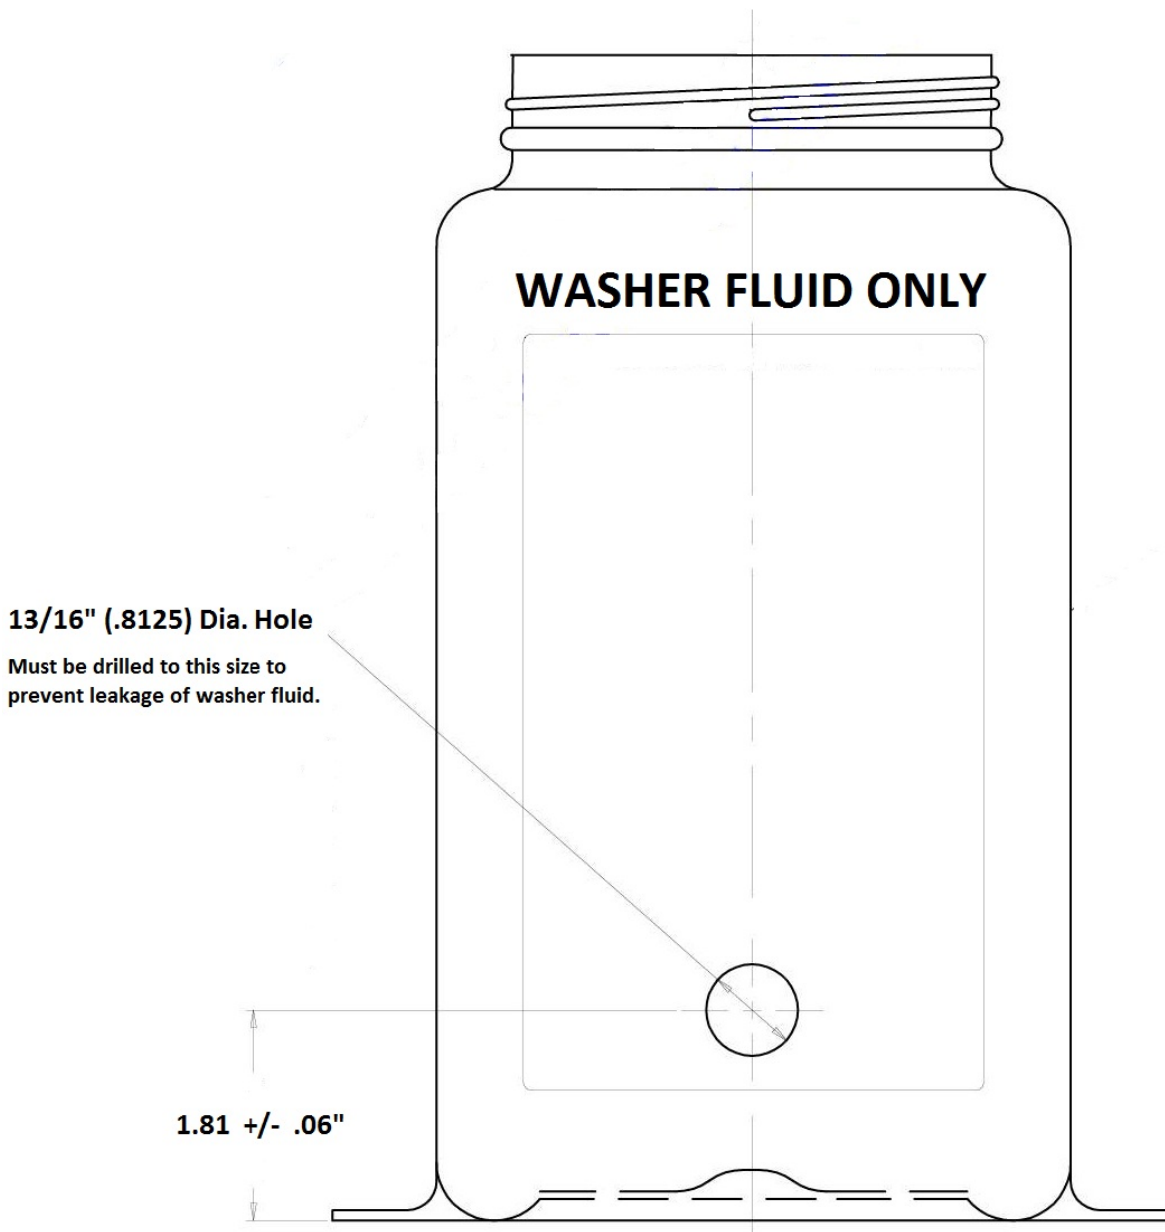

**Inside of Reservoir must be free of shavings and foreign matter.
Push Grommet into hole until tight against outside of Reservoir.
Insert Washer Pump into Grommet in vertical position.**

DATE: 11-18-10