

# RETRAC

MIRRORS

(A LUVERNE Company)

## TuffGuard

Univ	Stainless Steel Tuff Guard Assembly - 15° Bend	205500
Univ	E-Coated Black Tuff Guard Assembly - 15° Bend	205501
Univ	Stainless Steel Tuff Guard Assembly - 25° Bend	205504
Univ	E-Coated Black Tuff Guard Assembly - 25° Bend	205505

Year	Application	
	CUSTOM MOUNTING BRACKETS	
	<b>CHEVROLET/GMC</b>	
03-Current	Chevy Kodiak/GMC Topkick (C6500-C8500) (25° Bend)	205700
	<b>FORD</b>	
04-Current	Ford F-650/F-750 Series (25° Bend)	205770
	<b>FREIGHTLINER</b>	
08-09	Freightliner Cascadia (25° Bend)	205760
91-Current	Freightliner Classic (15° Bend)	205560
01-Current	Freightliner Columbia (15° Bend)	205600
	<b>INTERNATIONAL</b>	
97-Current	International 9200-9400 Series (15° Bend)	205580
01-Current	International DuraStar/TranStar (25 Bend)	205740
08-Current	International ProStar (25° Bend)	205680
	<b>KENWORTH</b>	
85-Current	Kenworth T600 (25° Bend)	205660
07-Current	Kenworth T660 (25° Bend)	204720
11-Current	Kenworth T680/T700 (25° Bend) <b>NEW</b>	204840
87-Current	Kenworth T800 (15° Bend)	205540
82-Current	Kenworth W900 (15° Bend)	204640
	<b>MACK</b>	
07-Current	Mack Pinnacle (25° Bend)	204780
	<b>PETERBILT</b>	
87-07	Peterbilt 378 (15° Bend/25° Bend for Kick Back Bumper)	205520
06-Current	Peterbilt 386 (25° Bend)	205720
07-Current	Peterbilt 388/389 (15° Bend)	205820
12-Current	Peterbilt 579 (25° Bend) <b>NEW</b>	205840
13-Current	Peterbilt 587 (25° Bend) <b>NEW</b>	205870
	<b>VOLVO</b>	
04-Current	Volvo New Style VN & VT (15° Bend)	205620
	<b>SPRINTER NEW</b>	
07-Current	Mercedes/Freightliner Sprinter Tuff Guard Assembly Blk	205530
07-Current	Mercedes/Freightliner Sprinter Tuff Guard Brackets	205860

# RETRAC

## MIRRORS


(A LUYERNE Company)

# PROTEC

## Grille Guard

Univ	Stainless Steel ProTec Grille Guard Assembly - 15° Bend	205515
Univ	E-Coated Black ProTec Grille Guard Assembly - 15° Bend	205516
Univ	Stainless Steel ProTec Grille Guard Assembly - 25° Bend	205517
Univ	E-Coated Black ProTec Grille Guard Assembly - 25° Bend	205505

Year	Application	
	CUSTOM MOUNTING BRACKETS	
	<b>CHEVROLET/GMC</b>	
03-Current	Chevy Kodiak/GMC Topkick (C6500-C8500) (25° Bend)	205700
	<b>FORD</b>	
04-Current	Ford F-650/F-750 Series (25° Bend)	205770
	<b>FREIGHTLINER</b>	
08-09	Freightliner Cascadia (25° Bend)	205760
91-Current	Freightliner Classic (15° Bend)	205560
01-Current	Freightliner Columbia (15° Bend)	205600
	<b>INTERNATIONAL</b>	
97-Current	International 9200-9400 Series (15° Bend)	205580
01-Current	International DuraStar/TranStar (25 Bend)	205740
08-Current	International ProStar (25° Bend)	205680
	<b>KENWORTH</b>	
85-Current	Kenworth T600 (25° Bend)	205660
07-Current	Kenworth T660 (25° Bend)	204720
11-Current	Kenworth T680/T700 (25° Bend) <b>NEW</b>	204840
87-Current	Kenworth T800 (15° Bend)	205540
82-Current	Kenworth W900 (15° Bend)	204640
	<b>MACK</b>	
07-Current	Mack Pinnacle (25° Bend)	204780
	<b>PETERBILT</b>	
87-07	Peterbilt 378 (15° Bend/25° Bend for Kick Back Bumper)	205520
06-Current	Peterbilt 386 (25° Bend)	205720
07-Current	Peterbilt 388/389 (15° Bend)	205820
12-Current	Peterbilt 579 (25° Bend) <b>NEW</b>	205840
13-Current	Peterbilt 587 (25° Bend) <b>NEW</b>	205870
	<b>VOLVO</b>	
04-Current	Volvo New Style VN & VT (15° Bend)	205620

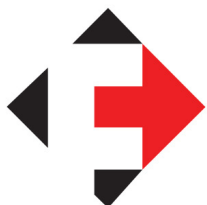

# MS FOSTER

SERVING THE TRANSPORTATION INDUSTRY

1040 Highway 212  
Michigan City, IN 46360

OFFICE 219.879.9225  
TOLL FREE 888.452.4053  
FAX 219.879.9313

sales@msfoster.com  
www.msfoster.com