


## M. S. Foster & Associates

1040 HIGHWAY 212, MICHIGAN CITY, IN 46360
Phone 219-879-9225 • Toll Free 888-452-4053
Fax 219-879-9313 • email: sales@msfoster.com
www.msfoster.com

## **Recommended Drilling for CamWash Pump**

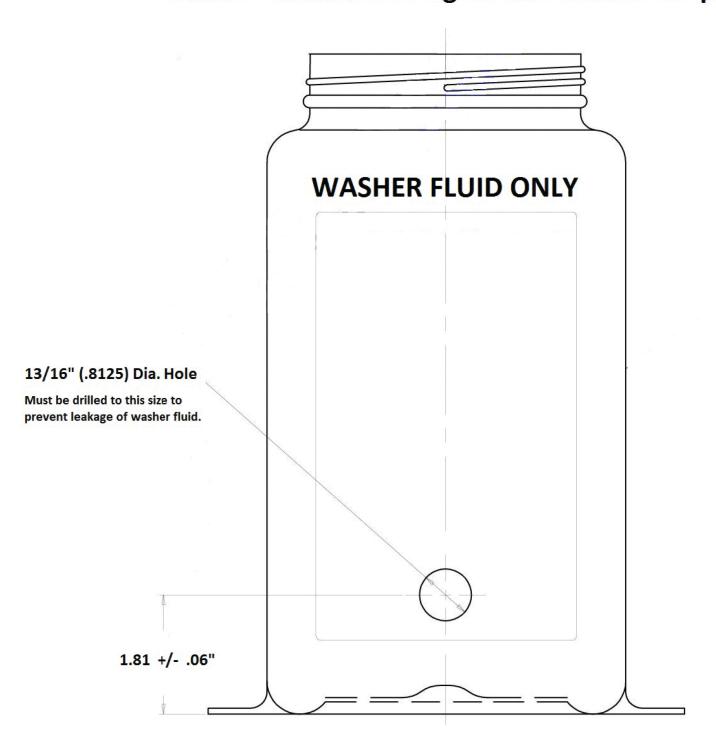

Inside of Reservoir must be free of shavings and foreign matter.

Push Grommet into hole until tight against outside of Reservoir.

Insert Washer Pump into Grommet in vertical position.

**DATE: 11-18-10**